

# BY-AP4

真无线蓝牙立体声音乐通话耳机



# 包装清单



耳机一对











(b) BOYA 无线充电盒




USB TYPE-C充电线





收纳袋

# 结构图示

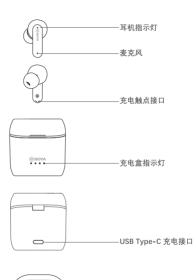



### 耳机佩戴



左耳



右耳

请洗用合适尺寸的耳塞。以保证佩戴舒适和良好的使用

效果,将配好耳塞的耳机按照上图所示方向塞入耳朵, 然后旋转耳机调整至最舒适的佩戴位置

### 开机 / 关机

### 自动开关机:

白动开机

打开充电盒上盖,两个耳机自动开机。

### 自动关机:

①耳机放回充电盒中, 合上盖子。

②打开充电盒上盖或从充电盒中取出耳 机后5五分钟无连接。

机后5五分钟无连接。
③耳机电量讨低时。



①手动长按左/右耳机2.5秒,左/右耳机开机。

②手动长按左/右耳机8秒,左/右耳机关机。

### 回连:

①当耳机与设备蓝牙已连接过,耳机关机后再开机,耳机自 动回连上最近一次连接过的设备。

### 蓝牙配对







### 自动开机和蓝牙连接:

①打开充电盒上盖,耳机自动开机并相互自动配对,配对成功后,主耳提示"Du",副耳提示"DuDu"(主副耳机自动切换);左右耳机蓝灯每0.5秒闪烁一次,等待蓝牙连接配对。②清打开您的蓝牙设备,搜索蓝牙名称"BY-AP4",点击蓝牙名称进行配对连接使用。

注: 单耳模式,单独将左耳机/右耳机从充电盒取出,等待蓝灯每0.5秒闪烁一次后,可直接搜索蓝牙名称"BY-AP4"进行连接使用;


# 耳机重置

### 注: 此模式用于耳机配对失败的情况

①在设备上取消配对或清除蓝牙配对记录。

②关机状态下,同时长按左右耳机12秒,耳机开机后然后直到两个耳机红灯常亮后关机。表示恢复出厂设置成功。

(3)将左右耳机同时放回充电点,合上上盖开始充电时,再打开 宽电点上盖,双耳自动互相配对,待双耳红蓝灯常亮2.5秒 后变成蓝灯每0.5秒闪烁一次,表示自动配对成双耳机模式。

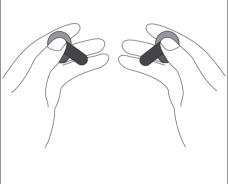

### 充电说明



使用充电盒为耳机充电:

将耳机放入充电盒中充电,合上充电

盒上盖,耳机自动关机并开始充电。 耳机进入充电模式,充电盒最左侧和 最右侧指示灯闪烁5秒后熄灭,分别表

示左耳机和右耳机外干充电状态。



使用无线充底座给耳机充电盒充电: 四个指示灯依次闪烁一秒。充电盒 充满电后,四个指示灯常亮。





使用USB数据线给耳机充电盒充电: 四个指示灯依次闪烁一秒。充电盒 充满电后,四个指示灯常亮。

# 基本操作

- ▲播放/暂停:
- ①音乐播放时,轻触两下左/右耳机,控制音乐暂停。 ②音乐暂停时 轻触两下左/右耳机 控制音乐继续播放。

## ● 音量増加/音量減少:

①长按左耳机1.5s"Du"一声,控制耳机媒体音量减少一格。 ②长按右耳机1.5s"Du"一声,控制耳机媒体音量增加一格。 注:最大量小音量时,有"DuDu"两声提示音:

- ●上一曲/下一曲:
- ①轻触三下左耳机,切换音乐上一曲。②轻触三下右耳机,切换音乐下一曲。
- ●唤醒语音助手:

辛 轻触四下左/右耳机、唤醒手机语音助手。

- ●通话功能:
- ①来电时、轻触一下左/右耳机、接听电话。
- ②来电时,长按左/右耳机1.5s"Du"一声,拒绝来电。 ③涌话时 好触一下左/右耳机,挂断电话。

### 指示灯

| (  | 开机时     | 耳机蓝灯常亮2.5s    |
|----|---------|---------------|
|    | 关机时     | 耳机红灯常亮2.5s    |
|    | 搜索配对模式  | 耳机蓝灯每0.5s闪烁一次 |
|    | 蓝牙已连接模式 | 耳机蓝灯每14s闪烁一次  |
|    | 蓝牙回连模式  | 耳机蓝灯每4s闪烁两次   |
|    | 蓝牙连接成功时 | 耳机红蓝灯常亮1.5s   |
|    | 来电时     | 耳机蓝灯每4s闪烁两次   |
|    | 耳机充电时   | 耳机红灯常亮        |
|    | 耳机充满电   | 耳机蓝灯常亮7s      |
|    | 耳机低电量报警 | 耳机红灯每14s闪烁一次  |
|    | 充电盒充电时  | 充电盒白灯闪烁       |
| -[ | 充电盒充满电  | 充电盒白灯常亮       |

### 提示音

| 开机时      | " Power on "                  |
|----------|-------------------------------|
| 关机时      | " Power off "                 |
| 搜索配对模时   | * Pairing *                   |
| 蓝牙已连接时   | " Your headset is connected " |
| 蓝牙断开连接时  | " Disconnected "              |
| 耳机低电量报警时 | " Battery low "               |
| 来电时      | " 手机铃声 "                      |
| 拒绝来电时    | " Call reject "               |
| 超距连接时    | " Link lost "                 |
| 恢复出厂设置时  | " DuDuDuDu "                  |
| 耳机最大音量时  | " DuDu "                      |
| 耳机最小音量时  | " DuDu "                      |

# 产品参数

| 蓝牙名     | BY-AP4                    |
|---------|---------------------------|
| 蓝牙版本    | V5.0                      |
| 频响范围    | 20HZ-20kHZ                |
| 蓝牙传输距离  | ≥10m                      |
| 耳机电池容量  | 50mAh*2                   |
| 充电盒电池容量 | 450mAh                    |
| 充电输入    | 5V/500mA                  |
| 音乐播放时长  | 耳机约6小时(50%音量)<br>充电盒约16小时 |
| 充电时长    | 耳机约1.5小时,充电盒约2小时          |
| 支持      | HSP/HFP/A2DP/AVRCP        |
| 重量      | 耳机(单耳)约4.7g,充电盒约40g       |

以上参数均来源博雅实验室,实际参数会因产品或其他因素而有 差异,如果疑问,请联系我们的售后团队。

# 听力保护

请勿长时间在高音量状态下使用,以防损害听力。 请勿将声音调整过大以防听不到周围声音。

## 安全事项

①请勿严重碰撞或避免严重跌落。

②请使用原装或合格的充电线。 ③请勿自行拆卸或修改耳机,以防损坏或危险。

④请保持耳机干燥,切勿长时间浸泡在水里。⑤远离儿童,防止影响儿童听力。

(9)远离儿童, 防止於峒儿里听刀。 ⑥请勿在雷电天气下使用耳机以防意外情况。 (7)诸使用干软布糖拭 避免使用刺激性化学物或强力洗涤剂。

# ⑧请勿在严重高温/潮湿/腐蚀性环境下使用本产品。 联系方式

①联系电话: 4006131096。 ②官网网址: www.jiayz.com。 ③联系址址: 广东省深圳市龙纸瓦观澜大宫工业区硅谷动

# 力智能终端产业园A16栋 常见问题

问: 蓝牙耳机不自动开机? 答: ①检查充电盒是否有电量。

②检查耳机是否电量不足。 ③长按耳机2.5s是否能手动开机

③长按耳机2.5s是否能手动开机。 问: 蓝牙耳机信号不稳定?

答: ①确认周围环境是否有很大的电磁信号干扰。 ②确认耳机离手机距离是否过远。

③重启手机,防止手机的问题导致信号的不稳定。 ④检查是否手机连接wifi信号不佳导致,可以关闭wifi尝

试对比确认。

问: 耳机无法充电怎么办? 答: ①确保耳机充电触点是否干净无异物阻挡。 ②耳机是否在充电盒里摆放到位。 ③充电点是否有充足的电量。 问: 耳机无法调节音量? 答: ①长按左耳机15s\*Dui\*一声 减少耳机音量一格。 长按右耳机15s\*Du\*一声。增加耳机音量一格。 ②连接大部分安卓系统手机 调节耳机上的音量控制 手机上

不会有音量条显示,共15格音量,需要用耳朵夫威受音量的变 14.

问: 蓝牙耳机听不到声音? 答: ①检查耳机是否与手机连接 媒体音频是否有选择上。

② 检查耳机 音量是否调至到静音状态。 ③检查耳机周围是否有申磁干扰或与手机距离讨远。

间: 如何判断耳机已经充满电? 答: ① 囯机 充申时长约1小时。

12个月质量保修

②当耳机充满电时、耳机红灯转为蓝灯常亮7秒后熄灭。

保



(更) 终身技术服务支持

# 保修规定

①消费者自购买一年内 产品出现质量问题 经本公司技术人员证实 该产品属于正常使用下发生的故障、将提供免费维修服务。

②在下列情况下、本公司拒绝提供免费保修服务、但提供维修服务、

A 产品被错误操作、 疏忽使用或因不可抗拒而导致机件损坏。 B.产品未经公司允许私下拆卸和维修。

C.耳机单元进杂物或撞击导致膜片变形。压烂、长时间泡水、外壳破 损, 变形等人为损坏。

D.产品超过一年有效保修期。

免收人工费,只收取零件费。

③此保修提供的免费服务不包括产品附件及其他包装、赠送品等。










# BY-AP4


True Wireless Stereo Earbuds



# Package Content

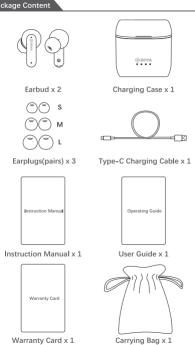

# Product Structure

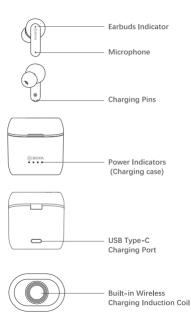

# Wearing Earplugs



Please choose one pair of earplugs with extra secure and appropriate size. Insert the headphones into your ear canals as shown above, rotate it to a suitable,

comfortable place.

### Power ON/OFF

### AUTO POWER ON/OFF:

Auto Power ON:

Open the case, and the earbuds turn

on automatically

Auto Power OFF:

①Put the earbuds back to the case and close the cover

②Haven't operate or connect the earbuds beyond 5 minutes. ③Being in ultra-low battery status

### POWER ON/OFF Manually:

①Turn ON: long press left/right earbud for 2.5 seconds, left/right earbud will turn on

②Turn OFF: long press left/right earbud for 8 seconds, left /right earbud will turn off

### Reconnect the device:

The earbuds will automatically reconnect to recent connected device, after turn back on.

### Bluetooth Pairing





# AUTO ON/Bluetooth Pairing:

①Open the case, the earbuds turn on and automatically pair with each other. After paired successfully, the main earbud prompts "Du", the auxiliary earbud prompts "DuDu", "②Open the Bluetooth on your device, searching for the Bluetooth named "BY-AP4" and select it to enter the pairing mode.


**NOTE**: for simgle-ear mode, take either left/right earbud out from charging case until blue light flash per 0.5s, than search "BY-AP4" for connection

# Earplugs Resetting/Restore Factory Setting


### NOTE: This mode is for the pairing failed condition of earplugs only.

- 1 Disable or clear "BY-AP4" from the Bluetooth list on your device.
- 2) After power off, long press and hold both earbuds for 12 seconds until the indicators glow solid red, indicating the Factory Setting is restored successfully.

3 Put the earbuds back to the charging case and close it. Open the case again, the earbuds will automatically pair with each other. The indicators glow solid blue for 2.5 seconds, then flash blue light every 0.5 seconds which means binaural mode is paired successfully.

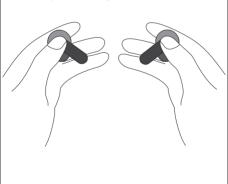

# Charging Guidance

 

Use the charging case for charging:

Place earbuds back into charging case, close cover, the earbud will automatically turn off, the left end/right end indicators flash 5s and then turn off, respectively indicates the left/right earbuds is charging.



Use wireless charger to charge the case: the indicators on the charging case flash white in sequence. When fully charged, the indicators glow solid white.

Wireless Charger



Use the USB Type-C charging cable to charge the case:
The indicators on the charging case flash

The indicators on the charging case flas white in sequence. When fully charged, the indicators glow solid white.

# Basic Operation

- ① Play/Pause:
  - Double tap left/right earbud
  - Volume + / Volume -
  - Volume + : Long press left earbud for 1.5s
  - Volume : Long press right earbud for 1.5s 3) Previous Track / Next Track
    - Previous Track: Triple press left earbud Next Track: Triple press right earbud
- Wake Up Voice Assistant
- Press left/right earbud 4 times

  (5) Calling Operation

  Answer/Hang Up: Press left/right earbud

Reject: Long press left/right earbud for 1.5s

# Indicator Light

| Power On:               | Earbuds blue light steady for 2.5s                 |
|-------------------------|--|
| Power Off:              | Earbuds red light steady for 2.5s                  |
| Connection Pending:     | Earbuds blue light flashes every 0.5s              |
| Reconnection Pending:   | Earbuds blue light flashes twice every 4s          |
| Successful Connected:   | Earbuds red/blue light steady for 1.5s             |
| Connected:              | Earbuds blue light flashes every 14s               |
| Incoming Call:          | Earbuds blue light flashes twice every 4s          |
| Earbuds Charging:       | Earbuds red light steady                           |
| Earbuds Fully Charged:  | Earbuds blue light steady for 7s and then turn off |
| Earbuds Low Power:      | Earbuds red light flashes every 14s                |
| Charging Case Charging: | Charging case white light flashes                  |

Charging Case Fully Charged Charging case white red light steady

### Sound Prompt

| Power On                | " Power on "                    |
|-------------------------|---------------------------------|
| Power Off               | " Power off "                   |
| Bluetooth Connecting    | " Pairing "                     |
| Bluetooth Connected     | " Your headset is connected "   |
| Bluetooth Disconnected  | " Disconnected "                |
| Low Battery             | " Battery low "                 |
| Incoming Calling        | " Mobile phone with ringtones " |
| Reject a Call           | " Call reject "                 |
| Over Distance Connected | " Link lost "                   |
| Restore Factory Setting | " DuDuDuDu "                    |
| Maximum Volume          | " DuDu"                         |
| Minimum Volume          | " DuDu "                        |

| Product Parameters             |                              |  |  |  |  |
|--------------------------------|------------------------------|--|--|--|--|
|                                |                              |  |  |  |  |
|                                |                              |  |  |  |  |
| Bluetooth Name:                | BY-AP4                       |  |  |  |  |
| Bluetooth Version:             | V5.0                         |  |  |  |  |
| Frequency Response:            | 20HZ-20kHZ                   |  |  |  |  |
| Transmission Range:            | ≥10m                         |  |  |  |  |
| earbud Battery Capacity:       | 50mAh*2                      |  |  |  |  |
| Charging Case Battery Capacity | 450mAh                       |  |  |  |  |
| Power Supply:                  | 5V/500mA                     |  |  |  |  |
| Music Play time:               | Earbuds: Approx 6 hrs        |  |  |  |  |
|                                | (50%volume)                  |  |  |  |  |
|                                | Charging case: Approx 16 hrs |  |  |  |  |
| Charging Time:                 | Earbuds: Approx 1.5 hrs      |  |  |  |  |
|                                | Charging case: Approx 2 hrs  |  |  |  |  |
| Bluetooth Profile:             | HSP/HFP/A2DP/AVRCP           |  |  |  |  |
| Weight:                        | Earbuds: 4.7g (0.2 oz)       |  |  |  |  |

Charging case: 40g (1.1oz) The above specification is sourced from the BOYA laboratory, and the

actual specification depends on the product or other factors. If you have any doubt, please contact our support team

# Hearing Protection

1 Do not use it too long under high volume as it may damage your hearing 2 Do not use too high volume in case surrounding sound cannot be heard

## Safety Precautions

Please avoid heavy drop or bump.

Please use original or qualified charging cable.

3 Do not disassemble or modify the earbuds yourself to prevent damage or danger.

Please avoid the earbuds from water contact and keen it dry.

(5) Please keep the earbuds away from children as it may damage their hearing

# 6 Do not use earbuds in lightning weather to prevent accidents

(7) Wipe with a soft, dry cloth to avoid irritating chemicals or strong detergents Do not use this product in severely hot/wet/corrosive environments.

# 1 Contact number: 4006131096

Contact Us

2 Official website: www.jiayz.com. 3 Address: Building A16, Silicon Valley Power Intelligent Terminal Industrial Park Guanlan Dafu Industrial District Shenzhen

### Common Problem O: The earbuds cannot turn on automatically?

A: (1) Check if the charging case has power.

2 Check if the earbuds are low powered

3 Check if the earbuds can be turned on manually O: Bluetooth signal is not stable?

A: (1) Check if there's electromagnetic interference surrounded

2) Check if the earbuds are too far from device

3 Restart the phone, to prevent the problem of mobile phone signal instability

(4) Turn off the wifi and try again. O: How to tell if the earbuds are fully charged? A: (1) The earbuds charging time is about 1 hour.

② When fully charged, the earbuds blue light will steady for 7s and then turn off

O: The earbuds cannot be charged? A: 1) Make sure the earbuds charging contacts are clean

 Whether the earbuds are placed in the charging case. Whether the charging case has sufficient power.

- O: How to adjust the earbuds volume? A: (1) Long press the left earbud for 1.5s to increase volumeLong press left
- earbuid for 1.5s to decrease volume (2) When you adjust the volume, most Android phone won't display the change, you need to feel the volume change yourself(There's 15 grades
- volume in total) O: How to connect earbuds with device?
- A. (1) Turn on the earbuds and wait until blue indicator lights flash every 0.5s. which means earbuds is pending for connection
  - 2 Turn on bluetooth function from your device and connect bluetooth
- named "BY-AP1" O: No sound from the earhurds?
- A: (1) Check if the earbuds are connected to the mobile phone, and whether
- the media audio is selected (2) Check if the earbuds volume is adjusted to the mute state

  - (3) Check if there's electromagnetic interference surrounded or if the earbuds are too far from device

### Warranty Service





12-Month Quality Warranty (1) Lifetime Technical Service Support

### Warranty Description

- (1) Within 1 year since the customer purchase this product, we will provide free warranty service in case the damage is caused during normal use
- 2 Under the following circumstances, the free warranty will be refused We will however provide free repair service but charging fee for parts
  - A. The product has been mishandled, inadvertently used, or damaged due to irresistible movement
  - B. The product is disassembled and repaired privately without the company's permission
  - C. The head unit is in the form of debris or impact, which causes the diaphragm to deform, crush, and soak for a long time. Damage to the casing, deformation, etc.
    - D. The using time exceed 1 year
- (3)The free service provided by this warranty does not include product accessories and other packaging, gifts products and so on.





