

BOYA

Multi-Compatible 2.4 GHz Dual-Channel Wireless Microphone System

2.4 GHz广泛兼容双通道无线麦克风系统

BOYALINK

Instruction Manual
使用说明

Statement

Please read this manual carefully before using and strictly operate and store it in accordance with the instructions. Please save the manual for your future reference. If you need further assistance than the user manual, please consult your retailer for help or email us:

support@boya-mic.com

General Introduction

The BOYALINK is an ultra-compact and portable 2.4 GHz wireless

microphone system, compatible with cameras, smartphones, tablets, computers and more. It features selectable noise cancellation, delivering broadcast-quality sound with remarkable ease of use. The BOYALINK is ideal for content creation, live streaming, vlogging, mobile journalism and much more.

There are 3 different adapters included in the kit: 3.5mm TRS, USB-C, and iOS Lightning. The receiver has a USB-C charging port that supports charging and powering the device while using it with a USB-C/ iOS Lightning adapter.

The included charging case allows you to charge the transmitter and receiver anywhere, making the BOYALINK kit easy to carry on.

Cautions

 
1. Non-professional teardown is strictly prohibited.
2. Please keep it away from heat sources such as radiators or spotlights.
3. Do not remove the battery without professionals' help.
4. Please clean the device with only a soft, dry cloth.
5. When using and storing, please keep away from the dust and moisture.
6. For the best pick-up pattern, do not hold your hand against the microphone capsule cover.

Features

- Also available in 48 kHz HD audio when noise cancellation enabled.
- Wide-range 20-20,000Hz frequency response - deliver exceptional high-quality sound.
- In-built rechargeable lithium-ion battery provides 10+ hours of recording.
- Mono / Stereo output switchable.
- 3.5mm TRS analog output, USB-C and iOS Lightning digital output - universal compatibility with cameras, smartphones and computers.
- Rotating clasp-type fur windshield, not easy to fall off.
- The receiver's clasp allows the adapter to be easily removed.
- Sound can be played directly through your phone's speaker without unplugging the receiver.

Product Structure

Transmitter

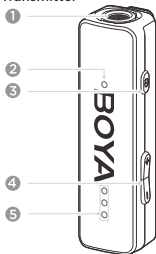


① In-built Microphone Capsule

② Status Indicator

Status	Indicator
Unpaired	Blinking blue slowly
Pairing	Blinking blue quickly
Paired successfully	Static blue
Mute	Blinking red slowly
Noise cancellation enabled	Static green
Low battery	Blinking red quickly
Charging	Static red
Fully charged	Red light off

③ Power Button

 - Press and hold to power on or off.
- Press to mute or unmute the microphone.
- Press and hold for 5 seconds to enter pairing status in shutdown mode.
- Press twice to take a photo or to start or stop recording a video as the receiver is connected to a smartphone

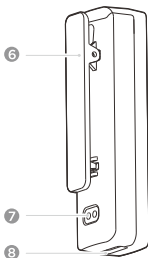

and paired with the transmitter.

④ + / - Button

- Press the "+" or "-" button to adjust mic gain in 6 levels.
- Press both the "+" and "-" buttons at the same time to enable/disable noise cancellation (The noise cancellation feature offers two levels: strong and weak. In the BOYA Central app, you can adjust the level based on different environments).
- The setting is retained even after the power is turned off.

⑤ Gain Indicator

Each light indicates a two-level input gain.
Maximum Gain: all lights blink 3 times at the same time.
Minimum Gain: only the last light blink 3 times.

 
⑥ Belt Clip

⑦ Charging Contacts

⑧ USB-C Charging Port

For charging the transmitter. (It's okay to use the transmitter while charging.)

Receiver

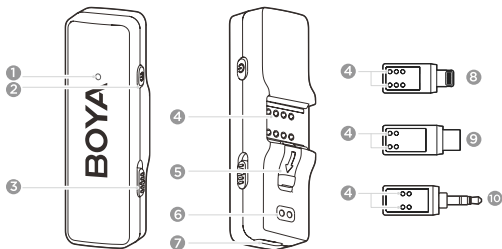

① Status Indicator

Status	Indicator
Unpaired	Blinking blue slowly
Pairing	Blinking blue quickly
Paired successfully	Static blue
Low battery	Blinking red quickly
Charging	Static red
Fully charged	Red light off

② Power Button

- Press and hold to power on or off.
 - Press twice to enable or disable the phone's speaker.
 - Press and hold for 5 seconds to enter pairing status in shutdown mode.
- HINT:

- (1) When your phone's speaker is enabled or disabled, the receiver will restart.
- (2) Once the speaker is enabled, sound can be played directly without unplugging the receiver.

③ Mono/ Stereo Toggle

The output mode can be set to either mono or stereo. When in mono mode, the audio from the capsule, or capsules will be mixed to both the left and right sides. When in stereo mode, the two capsules' audio output will be separated to the left and right sides.

④ Contacts

⑤ Clasp

⑥ Charging Contacts

⑦ USB-C Charging Port

For charging the receiver. An external device can be powered and charged through this port while the receiver with a USB-C or iOS Lightning adapter is plugged into it.

⑧ MFi Certified Lightning Adapter

It can be connected to an iOS Lightning device.

 
⑨ USB-C Adapter

It can be connected to Android Smartphones, Tablets, Computers and other USB-C devices.

⑩ 3.5mm TRS Adapter

It can be connected to cameras, recorders, mixers or other devices with a 3.5mm TRS jack.


Charging Case

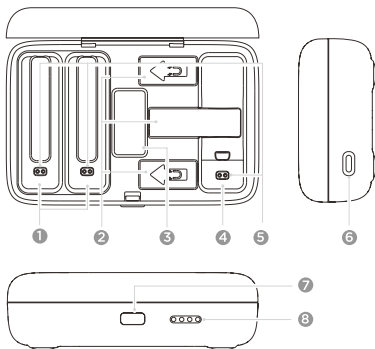






- ① Slot for Transmitter(s)
- ② Slot for Adapters
- ③ Slot for Fur Windshield
- ④ Slot for Receiver
- ⑤ Charging Contacts
- ⑥ USB-C Charging Port
- ⑦ OPEN Button
- ⑧ Charging Indicator

Status	Battery Level	Indicator
Low battery	<10%	● ○ ○ ○
Charging	<25%	● ○ ○ ○
	25%-50%	● ● ○ ○
	50%-75%	● ● ● ○
	75%-100%	● ● ● ●
Fully charged	100%	● ● ● ●

 
Operation Guide

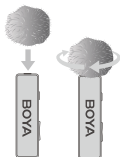

1. Attach the fur windshield to the transmitter(s) when using it outdoors or in a windy environment.

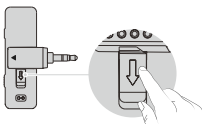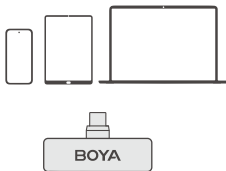     

 
2. Push the selected adapter into the receiver. Connect the receiver to your audio devices, such as a camera, smartphone, tablet, computer, etc.

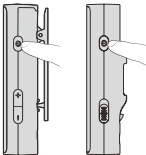

3. Press and hold the power buttons to turn the transmitter(s) and receiver on.
4. The transmitter(s) and receiver are paired by default. If they are disconnected, please press and hold their power buttons for 5 seconds in shutdown mode until their status indicators blink blue rapidly, making them enter the pairing state.




 5. The transmitter(s) and receiver will be successfully paired within 10 seconds. The indicators of both are static blue.




6. Toggle **M**  **S** to select either mono or stereo output mode.

 7. It is recommended to record a sample and play it back to check if the audio level is acceptable before recording.



 8. In order to improve the recording effect in a noisy environment, it is recommended that press the "+" and "-" buttons  on the transmitter(s) at the same time to enable noise cancellation.
HINT: When two transmitters are paired with a receiver, the noise cancellation feature of both are synced up.

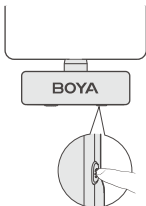

9. Press the power button twice to enable your phone's speaker to play the sound directly without unplugging the receiver.
10. After recording, put the transmitter(s) and receiver back into the case for charging.

BOYA Central app

When the receiver is connected to a smartphone or computer, the user can record audio or video with the help of the BOYA Central app.

 
1. Please scan the QR code below with your phone to install the BOYA Central app.



2. Mount the correct adapter on the receiver according to your device's port, and then connect the receiver to your smartphone. Launch the BOYA Central app. Tap "BOYALINK" to enter the receiver (RX), transmitter (TXA), and transmitter (TXB) control page.



- Tap "Speaker" to enable or disable the phone's speaker. (When your phone's speaker is enabled or disabled, the receiver will restart)

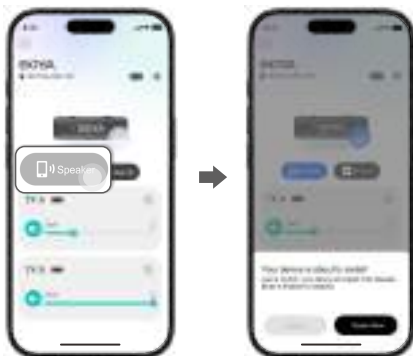

- Tap "Weak NC / Strong NC" to switch the noise cancellation level.



Troubleshooting

If you encounter problems when using the unit, please refer to the following checklist before contacting technical support. If the problem cannot be solved, please contact the dealer's after-sales service department.

- **Sound from the unit is silent when connected to an external device**

- ① Make sure the adapter on the receiver is well connected to your device. Or remove the adapter and wipe the charging contacts with a clean cloth.
- ② Make sure the mic gain is not turned to minimum.
- ③ Make sure the unit is not muted.

- **Sound of the unit is too low or too loud or even distorted**

Adjust mic gain to the suitable level for recording in the current environment to improve the recording effect.

- **Current noise or other abnormal noise appears during monitoring**

Make sure there is no interference near the unit. If the noise still exists after changing the unit's position, please contact our customer service.

- **The operating range of the unit is limited and the sound is frequently intermittent**

Make sure there is no interference between the transmitter and receiver. If the intermittent sound still occurs frequently, please contact our customer service.

- **Howling noise occurs when using the receiver with an adapter**

Make sure your the Speaker Mode is disabled.

- **Failed to charge the transmitter(s) or receiver via the charging case**

- ① Make sure the charging contacts of both are in full contact. Wipe the charging contacts with a clean cloth and try again.
- ② If you want to check whether the magnetic force is aging or whether the charging contacts of the two are not in sufficient contact, press the transmitter/receiver placed in the charging case to check whether it is in a charging state. If they are still failed to be charged, please contact our customer service.

Specifications

Transmitter & Receiver

Transmission Type	2.4GHz digital frequency
Modulation	Digital modulation
Polar Pattern	Omnidirectional
Antenna	Ceramic antenna
Operating Range (Without Obstacle)	Up to 300 m (This value is tested in the open areas without any interferences according to FCC standard.)
RF Output Power	< 10 mW
Distortion	< 0.01%
Frequency Response	20 Hz - 20 kHz
Sampling Rate	48 kHz
Bit Rate	24 bit
Signal-to-Noise Ratio	>85 dB
Sensitivity	-42 dB
Audio Input	TX: In-built microphone capsule
Audio Output	RX: 3.5 mm TRS analog output, USB-C and iOS Lightning digital output
Battery Voltage/ Capacity	TX: 3.7V / 95mAh RX: 3.7V / 120mAh
Power Requirements	In-built lithium-ion battery / Charging contacts / USB-C charging port
In-built Battery Life	TX: Approx. 10 hours RX: Approx. 6 hours
Weight	TX: 13 g; RX: 15 g (with an adapter)
Dimensions	TX: 59 × 16.2 × 13 mm RX: 59 × 18.2 × 13.3 mm
Operating Temperature	0°C to +50°C
Storage Temperature	-10°C to +50°C

Charging Case

Battery Capacity	1000 mAh
Charging Time	Approx. 1.5 hours
Charging Connector	USB-C
Times for Charging Microphone	2 times (2*TX+1*RX)
Weight	99 g
Dimensions	112 x 73 x 33 mm
Operating Temperature	0°C to +50°C
Storage Temperature	-10°C to +50°C

In the Box

BOYALINK

2× BOYALINK Transmitter
1× BOYALINK Receiver
1× USB-A to USB-C Cable
1× MFi Certified Lightning Adapter
1× 3.5mm TRS Adapter
1× USB-C Adapter
2× Fur Windshield
1× Charging Case
1× Carrying Pouch

BOYALINK A2

2× BOYALINK Transmitter
1× BOYALINK Receiver
1× USB-A to Triple USB-C Cable
1× MFi Certified Lightning Adapter
1× 3.5mm TRS Adapter
1× USB-C Adapter
2× Fur Windshield
1× Carrying Pouch

BOYALINK A1

1× BOYALINK Transmitter
1× BOYALINK Receiver
1× USB-A to Dual USB-C Cable
1× MFi Certified Lightning Adapter
1× 3.5mm TRS Adapter
1× USB-C Adapter
1× Fur Windshield
1× Carrying Pouch

声明

请在使用前仔细阅读本手册，并严格按照说明进行操作和存储。请妥善保管好说明书以供将来参考。如果用户手册不能帮助您解决某些问题，请向零售商寻求帮助或给我们发送电子邮件：
support@boya-mic.com

注意事项

1. 请勿擅自拆开机壳；
2. 请勿将本机靠近热源，如散热器、聚光灯或其他产生热量的设备；
3. 电池不可自行更换；
4. 请使用柔软的干布清洁本设备；
5. 在使用和储存时，请注意防尘和防潮。
6. 为获得最佳拾音效果，请勿将手放在麦克风咪头上。

概述

BOYALINK 是一款迷你便携的 2.4 GHz 无线麦克风系统，兼容相机、智能手机、平板、电脑等设备。产品具有可设置的降噪功能，可提供出色的广播级音质，易于使用，适用于内容创作、直播、Vlog拍摄、移动新闻等应用场景。

本系列有 3.5mm TRS、USB-C、iOS Lightning 三种转接头可供选择。接收器具有 Type-C 充电孔，在与 iOS Lightning / USB-C 转接头一起使用时，支持一边录制一边给设备充电。

 
 
充电盒可为发射器和接收器提供移动电源，便于出行携带。

特点

- 一键降噪，48kHz 高清音质
- 20-20,000Hz 频响范围，高品质还原真实声音
- 内置可充电锂电池续航长达 10 小时
- 自由切换单声道/立体声输出模式
- 3.5mm TRS 模拟输出 & USB-C、iOS Lightning 数字输出——广泛兼容相机、手机、电脑等
- 旋转卡扣式防风毛套，安装牢固不易脱落
- 接收器自带卡扣，方便更换转接头
- 接收器支持手机外放音频

产品结构

发射器

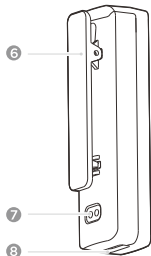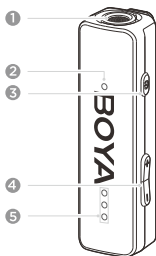

① 内置麦克风

② 状态指示灯

状态	指示灯
未联机	蓝灯慢闪
对码中	蓝灯快闪
联机成功	蓝灯常亮
静音模式	红灯慢闪
降噪开启	绿灯常亮
低电量提示	红灯快闪
充电中	红灯常亮
充满电	红灯熄灭

③ 电源键

- 长按此键开/关机，短按此键开启/关闭静音模式。
- 当接收器连接智能手机后，双击此键可控制手机相机拍照或录像。
- 关机状态下长按5秒进入对码状态。

④ +/-键

- 短按“+”/“-”键可调节麦克风增益(共6档)。
- 同时按下“+”键和“-”键可开启/关闭降噪功能。(降噪功能有强降噪、弱降噪两档,可根据使用场景在BOYA Central App上调节降噪等级)
- 参数设定在电源关闭后仍保留。

⑤ 增益指示灯

三个指示灯以两档增益为划分,由上至下分别对应显示第6/5、4/3、2/1增益档位。增益调至最大时,三个指示灯同步闪烁3次;增益调至最小时,仅最下方的指示灯闪烁3次。

 
⑥ 背夹

⑦ 充电触点

⑧ Type-C充电孔

用于给发射器充电(支持边充边用)。

接收器

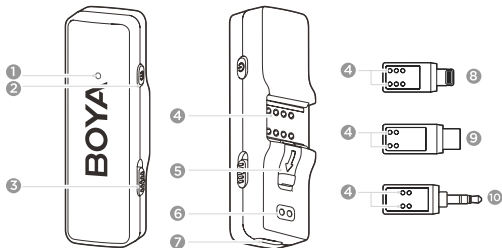

① 状态指示灯

状态	指示灯
未联机	蓝灯慢闪
对码中	蓝灯快闪
联机成功	蓝灯常亮
低电量提示	红灯快闪
充电中	红灯常亮
充满电	红灯熄灭

② 电源键

- 长按此键开/关机；双击此键开启/关闭外放功能。
- 关机状态下长按5秒进入对码状态。

注：

- (1) 开启/关闭外放功能，接收器将重新启动。
- (2) 外放功能开启后，无需拔掉接收器即可外放手机音频。

③ 单声道/立体声切换键

输出模式可以设置为单声道或立体声。在单声道模式下，两个发射器录制的音频将合并在一起，在一条音频通道里输出。在立体声模式下，两个发射器的音频将分配到左右两个独立声道里输出。

④ 触点

⑤ 卡扣

⑥ 充电触点

⑦ Type-C充电孔

用于给接收器充电。当带有Lightning/ Type-C转接头的接收器插入外部设备时，可通过此充电端口为外部设备充电。

⑧ MFi认证Lightning转接头

适配带Lightning接口的iOS设备。

 
⑨ Type-C转接头

适配安卓手机、平板或其他带Type-C接口的设备。

⑩ 3.5mm TRS转接头

适配相机、混音器、录音笔或其他带3.5mm TRS接口的设备。

充电盒

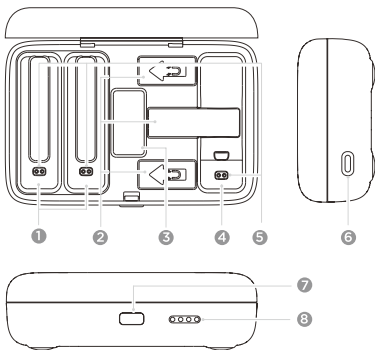



- ① 发射器凹槽
- ② 转接头凹槽
- ③ 防风毛套凹槽
- ④ 接收器凹槽
- ⑤ 充电触点
- ⑥ Type-C 充电孔
- ⑦ 按压式开关
- ⑧ 充电指示灯

状态	电量	指示灯
低电量提示	<10%	● ○ ○ ○
充电中	<25%	● ○ ○ ○
	25%-50%	● ● ○ ○
	50%-75%	● ● ● ○
	75%-100%	● ● ● ●
充满电	100%	● ● ● ●


操作指南



  - 1.在户外录音或有风的环境下,为保持录音清晰的效果,建议将防风毛套安装到发射器上

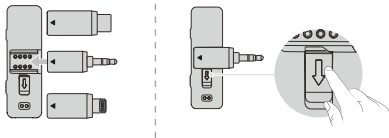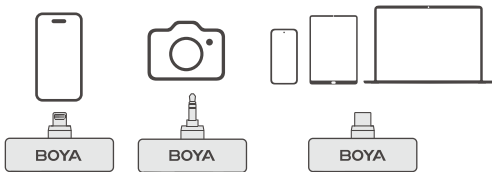

 - 2.选择适配的转接头安装到接收器的凹槽,然后连接至相机、手机、平板、或电脑等设备。

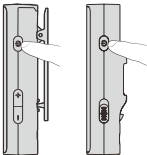


3. 长按发射器和接收器的电源键，将其开机。

4. 发射器和接收器出厂前已配对成功。若其断开连接，请在发射器和接收器关机状态下长按其电源键5秒使之进入配对状态，待指示灯呈蓝灯快闪时松手。



 5. 发射器和接收器将在10秒内完成配对，其指示灯均呈蓝灯常亮。




6. 拨动 M  S，可切换单声道/立体声输出模式。

7. 建议在正式录音前做个简短的录音测试，检查音频水平是否可以接受。



8. 若录音环境嘈杂，还可以同时按发射器“+”“-”键  开启降噪模式，提高录制效果。

 注：两个发射器同时连接接收器使用时，其降噪功能可以保持同步。

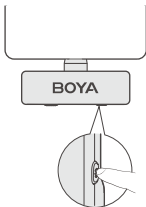

9. 双击接收器电源键可开启外放功能，即可直接外放手机音频。

10. 录制结束后，可将发射器/接收器放入充电盒中进行充电。

BOYA Central 应用程序

当接收器与手机、电脑等设备连接时,推荐使用BOYA Central应用程序辅助录制音频。

1. 请用手机扫描下方二维码, 下载并安装BOYA Central 应用程序。



2. 使用标配的Lightning / USB-C转接头将接收器连接至手机, 启用 BOYA Central 应用程序。
点击BOYALINK进入接收器 (RX)、发射器 (TXA)、发射器 (TXB) 控制页面。



• 点击“外放”，可开启/关闭外放功能。(开启或关闭外放功能时，接收器将重新启动)



• 点击“弱降噪/强降噪”，可切换降噪等级。



故障排除

在使用本机的过程中出现任何问题，请参照以下内容加以解决。如果此手册仍然无法解决您遇到的问题，请与我们当地的经销商售后服务部联系。

• 本机无声音

- ① 检查产品是否连接正常以及转接头是否有松动；或者将转接头取出，用干净的布擦拭充电触点。
- ② 检查增益是否被调至最低。
- ③ 请验证本机是否开启了静音模式。

• 本机声音过小或过大甚至破音

通过调节增益，找到最适合当前环境录制的档位，提高录制效果。

• 监听时有不干净的电流声或异常噪音等

请检查本机附近是否有干扰源；若本机更换使用位置后还是有噪音，请联系客服咨询。

• 产品的使用距离受限且声音频繁断续

查看发射器、接收器之间是否有干扰源，将产品更换使用位置再次确认，若声音还是频繁断续，请联系客服咨询。

• 使用带有转接头的接收器时有啸叫声

检查接收器是否开启了手机外放功能。外放功能开启时可能会产生啸叫现象。

• 充电盒无法给发射器/接收器充电

- ① 检查充电触点是否接触不到位，可用干净的布擦拭充电触点后再次进行验证。
- ② 检查磁力是否老化、充电触点是否接触不到位，可通过手按压发射器/接收器验证能否进入充电状态。若仍然无法充电，请联系客服咨询。

参数

发射器&接收器

传输方式	2.4 GHz数字频段
信号调制	数字调制
极性模式	全向型
天线	陶瓷天线
操作距离(无障碍)	300米(在空旷无干扰环境下依据FCC标准测得。)
射频输出功率	<10 mW
失真	<0.1%
频率响应	20 Hz - 20kHz
采样率	48 kHz
比特率	24 bit
信噪比	>85 dB
灵敏度	-42 dB
音频输入	TX:内置咪头
音频输出	RX:3.5mm TRS转接头 / Type-C转接头 / MFi认证Lightning转接头
电池规格	TX: 3.7 V / 95 mAh RX: 3.7 V / 120 mAh
供电方式	内置锂电池供电 / 充电盒触点充电 / Type-C充电孔
内置电池续航时长	TX:约10小时 RX:约6小时
重量	TX:13 g RX:15 g(带端子)
尺寸	TX:59 × 16.2 × 13 mm RX:59 × 18.2 × 13.3 mm
工作温度	0°C ~ +50°C
贮存温度	-10°C ~+ 50°C

充电盒

电池容量	1000 mAh
充电时长	1.5 H
充电接口	Type-C接口
可供充电次数	支持2*TX+1*RX循环充电2次
重量	99 g
尺寸	112 × 73 × 33 mm

包装清单

BOYALINK

- 2 × 发射器
- 1 × 接收器
- 1 × USB-A转Type-C充电线
- 1 × MFi Lightning转接头
- 1 × 3.5mmTRS转接头
- 1 × Type-C转接头
- 2 × 防风毛套
- 1 × 充电盒
- 1 × 收纳袋

BOYALINK A2

- 2 × 发射器
- 1 × 接收器
- 1 × USB-A转三头TYPE-C充电线
- 1 × MFi Lightning转接头
- 1 × 3.5mmTRS转接头
- 1 × Type-C转接头
- 2 × 防风毛套
- 1 × 收纳袋

BOYALINK A1

- 1 × 发射器
- 1 × 接收器
- 1 × USB-A转双头TYPE-C充电线
- 1 × MFi Lightning转接头
- 1 × 3.5mmTRS转接头
- 1 × Type-C转接头
- 1 × 防风毛套
- 1 × 收纳袋

SHENZHEN JIAYZ PHOTO INDUSTRIAL., LTD.

The BOYA logo is a trademark which is registered and owned by Shenzhen Jiayz Photo Industrial., Ltd.

深圳市长丰影像器材有限公司

地址：深圳市观澜街道章阁大富路智能终端产业园 A16 栋

TEL: 400 6131096

Email: support@boya-mic.com

www.boyamic.com / www.jiayz.com